## Panel Wiring Diagram Model S2 IR1 PT





814 AIRWAY AVENUE SUTHERLIN, OREGON

(541) 459-4449

FACSIMILE: (541) 459-2884

**Timer On & Off:** This float turns off the programmable timer when lowered. When this float is lifted the timer will be restarted. Note: The timer will start with its off cycle. TELEPHONE Programmable Timer: The timer turns the pump on and off in a pre-set cycle. Note: The timer will start with its off cycle.

## Key

**Simplex Operation** 

= Factory Wire
= Field Wire
= Alternate Field Wire
A = Audio Alarm, 115 VAC

High Level Alarm: This float activates the alarm light and audible alarm when lifted. The audible alarm may be silenced by pressing the illuminated PUSH TO SILENCE button on the front of the control panel.

The alarm light will remain on until the float is lowered.

AL = Alarm Light
AS = Audio Silence Switch
CCB = Controls Circuit Breaker
CR1 = Override Relay
IR = Intrinsically Safe Relay

M = Motor Contactor
PCB = Pump Circuit Breaker
SR = Silence Control Relay
TL = Terminal Link

\*Options
CT = Cycle Counter
ETM = Elapsed Time Meter HT = Heater
PL = Power Light
PRL = Pump Run Light

## Remote Alarm Connections

0

Orenco Model AHW or equiv

Note: 115VAC signal is present during alarm conditions.



