




Float Arrangement Diagram


Check the appropriate box for the float function (color code) used in your system.

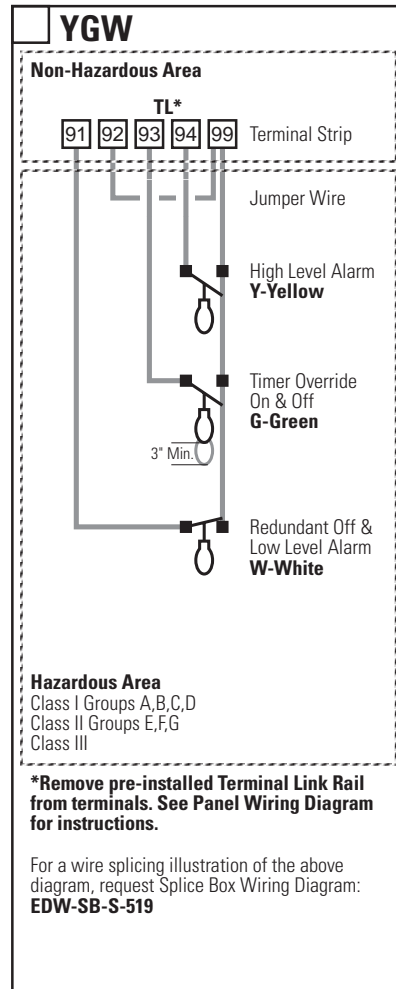

Float Types

 **Typical Orenco float model: A**
Specs: contact - normally open
differential - no minimum
power rating - signal

 **Typical Orenco float model: G**
Specs: contact - normally open
differential - 3" min.
power rating - signal

 **Typical Orenco float model: T**
Specs: contact - normally closed
differential - no minimum
power rating - signal

Floats or equivalent devices must be purely resistive and non-energy storing

Notes:

Install in accordance with Art. 504 of the National Electric Code

Maximum cable length from panel to float is 2,000 ft.



Orenco Systems®
Incorporated

814 AIRWAY AVENUE
SUTHERLIN, OREGON
97479-9012

TELEPHONE:
(541) 459-4449

FACSIMILE:
(541) 459-2884

Important: In recirculating systems, this drawing replaces drawing no. "EDW-FA-S-504".

Control Panel Series

S IR2 PT RO

For use in recirculating systems.

Drawing No.

EDW-FA-S-505

EDW-FA-S-505
Rev 3.0 © 01/01/08